


## COLD SMOKE ADAPTER ZW-01

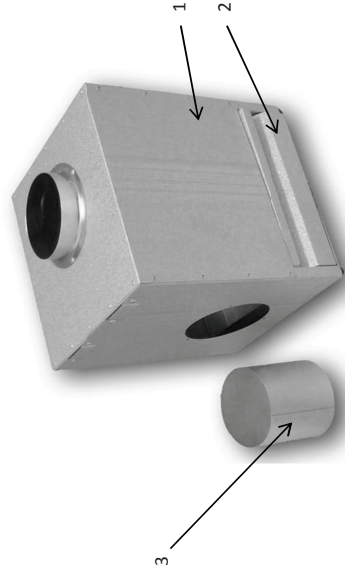

Owner's manual



**ZUT BORNIAK**  
ul. Bolesława Chrobrego 31E, 78-449 Borne Sulinowo  
Tel. +48 94 716 22 29  
e-mail: info@borniak.pl, web: www.borniak.pl

### Set includes:

1. Cold smoke adapter box
2. Tray
3. Connector between the duct and the smoker unit.

### Installation instructions:


1. When installing the unit the power supply must be disconnected.
2. Turn off the smoking chamber and the smoke generator before starting installation procedure.
3. Remove the smoke generator from the smoker unit and connect it with the adapter.
4. Connect the cold smoke adapter with the smoking chamber using an aluminium duct  $\varnothing 100$ .



### Note!

- You will need to get an aluminium duct  $\varnothing 100$  to install the cold smoke adapter as it is not included in the set. (the duct may be purchased in any building material store)
- 1.5 meter duct is enough to make the smoke temperature in the chamber 1-2 degrees higher than the atmospheric temperature.

## COLD SMOKE ADAPTER ZW-01

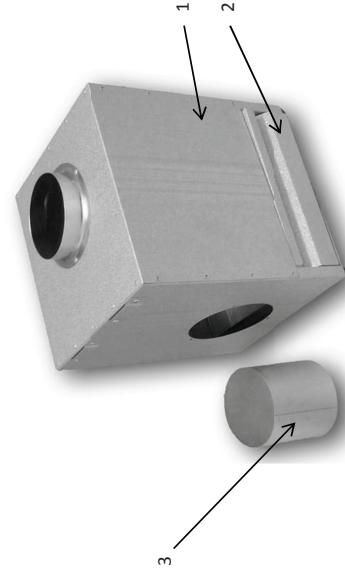

Owner's manual



**ZUT BORNIAK**  
ul. Bolesława Chrobrego 31E, 78-449 Borne Sulinowo  
Tel. +48 94 716 22 29  
e-mail: info@borniak.pl, web: www.borniak.pl

### Set includes:

1. Cold smoke adapter box
2. Tray
3. Connector between the duct and the smoker unit.

### Installation instructions:

5. When installing the unit the power supply must be disconnected.
6. Turn off the smoking chamber and the smoke generator before starting installation procedure.
7. Remove the smoke generator from the smoker unit and connect it with the adapter.
8. Connect the cold smoke adapter with the smoking chamber using an aluminium duct  $\varnothing 100$ .



### Note!

- You will need to get an aluminium duct  $\varnothing 100$  to install the cold smoke adapter as it is not included in the set. (the duct may be purchased in any building material store)
- 1.5 meter duct is enough to make the smoke temperature in the chamber 1-2 degrees higher than the atmospheric temperature.